

24PCS*3W (3IN1) LED WALL WASH LIGHT

● DMX Channel Function

1. 2Channel Model (A001)

Chan nel	DMX Date	Function Description
CH1	000-011	No effect
	012-023	LED Color: Red
	024-035	LED Color: Green
	036-047	LED Color: Blue
	048-059	LED Color: Yellow
	060-071	LED Color: Purple
	072-083	LED Color: Cyan
	084-095	LED Color: White
	096-107	Program Effect -1
	108-119	Program Effect -2
	120-132	Program Effect -3
	133-143	Program Effect -4
	144-155	Program Effect -5
	156-167	Program Effect -6
	168-179	Program Effect -7
	180-191	Program Effect -8
	192-203	Program Effect -9
	204-217	Program Effect -10
	218-227	Program Effect -11
	228-239	Program Effect -12
240-251	Program Effect -13	
252-255	Sound Effect	
CH2	000-255	Speed, from slow to fast

2. 3Channel Model (C001)

Chan nel	Function	Function Description
CH1	000-255	Red Dimmer, from dark to bright
CH2	000-255	Green Dimmer, from dark to bright

CH3	000-255	Blue Dimmer, from dart to bright
-----	---------	----------------------------------

3.4 Channel Model (d001)

Channel	DMX Date	Function Description
CH1	000-255	RGB Sum Dimmer, from dart to bright
CH2	000-255	Red Dimmer, from dart to bright
CH3	000-255	Green Dimmer, from dart to bright
CH4	000-255	Blue Dimmer, from dart to bright

4.6 Channel Model (E001)

Channel	DMX Date	Function Description
CH1	000-255	R1 Dimmer, from dart to bright
CH2	000-255	G1 Dimmer, from dart to bright
CH3	000-255	B1 Dimmer, from dart to bright
CH4	000-255	R2 Dimmer, from dart to bright
CH5	000-255	G2 Dimmer, from dart to bright
CH6	000-255	B2 Dimmer, from dart to bright

5.7 Channel Model (H001)

Channel	DMX Date	Function Description
CH1	000-255	RGB Sum Dimmer, from dart to bright
CH2	000-255	Red Dimmer, from dart to bright
CH3	000-255	Green Dimmer, from dart to bright
CH4	000-255	Blue Dimmer, from dart to bright
CH5	007-255	RGB Strobe
CH6	000-011	No effect
	012-023	LED Color: Red
	024-035	LED Color: Green
	036-047	LED Color: Blue
	048-059	LED Color: Yellow
	060-071	LED Color: Purple
	072-083	LED Color: Cyan

	084-095	LED Color: White
	096-107	Program Effect -1
	108-119	Program Effect -2
	120-132	Program Effect -3
	133-143	Program Effect -4
	144-155	Program Effect -5
	156-167	Program Effect -6
	168-179	Program Effect -7
	180-191	Program Effect -8
	192-203	Program Effect -9
	204-217	Program Effect -10
	218-227	Program Effect -11
	228-239	Program Effect -12
	240-251	Program Effect -13
	252-255	Sound Effect
CH7	000-255	Speed, from slow to fast

1. 12 Channel Model (L001) -- 4 Section Model


Chan nel	Function	Function Description
CH1	000-255	R1 Dimmer, from dart to bright
CH2	000-255	G1 Dimmer, from dart to bright
CH3	000-255	B1 Dimmer, from dart to bright
CH4	000-255	R2 Dimmer, from dart to bright
CH5	000-255	G2 Dimmer, from dart to bright
CH6	000-255	B2 Dimmer, from dart to bright
CH7	000-255	R3 Dimmer, from dart to bright
CH8	000-255	G3 Dimmer, from dart to bright
CH9	000-255	B3 Dimmer, from dart to bright
CH10	000-255	R4 Dimmer, from dart to bright
CH11	000-255	G4 Dimmer, from dart to bright
CH12	000-255	B4 Dimmer, from dart to bright

6. 24 Channel Model (P001) -- 8 section model

Channel	Function	Function Description
CH1	000-255	R1 Dimmer, from dart to bright
CH2	000-255	G1 Dimmer, from dart to bright
CH3	000-255	B1 Dimmer, from dart to bright
CH4	000-255	R2 Dimmer, from dart to bright
CH5	000-255	G2 Dimmer, from dart to bright
CH6	000-255	B2 Dimmer, from dart to bright
CH7	000-255	R3 Dimmer, from dart to bright
CH8	000-255	G3 Dimmer, from dart to bright
CH9	000-255	B3 Dimmer, from dart to bright
CH10	000-255	R4 Dimmer, from dart to bright
CH11	000-255	G4 Dimmer, from dart to bright
CH12	000-255	B4 Dimmer, from dart to bright
CH13	000-255	R5 Dimmer, from dart to bright
CH14	000-255	G5 Dimmer, from dart to bright
CH15	000-255	B5 Dimmer, from dart to bright
CH16	000-255	R6 Dimmer, from dart to bright
CH17	000-255	G6 Dimmer, from dart to bright
CH18	000-255	B6 Dimmer, from dart to bright
CH19	000-255	R7 Dimmer, from dart to bright
CH20	000-255	G7 Dimmer, from dart to bright
CH21	000-255	B7 Dimmer, from dart to bright
CH22	000-255	R8 Dimmer, from dart to bright
CH23	000-255	G8 Dimmer, from dart to bright
CH24	000-255	B8 Dimmer, from dart to bright

● Menu Operation & LED Display Description

1. Menu Operation

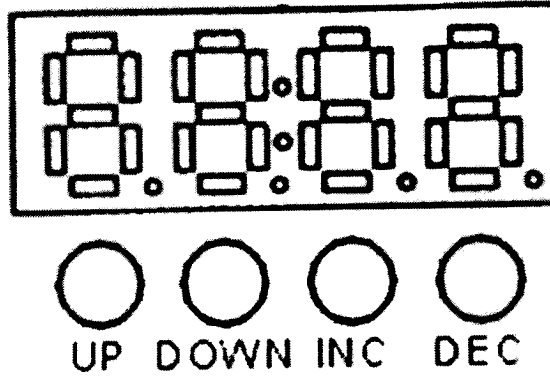

2 LED Display Description

Item	Display	Date	Function
1	A001	001- 512	DMX512 address setup -2CH Model
2	C001	001- 512	DMX512 address setup -3CH Model
3	d001	001- 512	DMX512 address setup -4CH Model
4	E001	001- 512	DMX512 address setup -6CH Model
5	H001	001- 512	DMX512 address setup -7CH Model
6	L001	001- 512	DMX512 address setup -12CH Model
7	P001	001- 512	DMX512 address setup -24CH Model
8	r255	000 - 255	Red Dimmer, from dart to bright
9	G255	000 - 255	Green Dimmer, from dart to bright
10	b255	000 - 255	Blue Dimmer, from dart to bright
11	FF00	00 - 20	RGB Strobe, speed from slow to fast
12	1J00	00 - 20	Program Effect1, speed slow to fast
13	2J00	00 - 20	Program Effect2, speed slow to fast
14	3J00	00 - 20	Program Effect3, speed slow to fast
15	4J00	00 - 20	Program Effect4, speed slow to fast

16	5J00	00 - 20	Program Effect5, speed slow to fast
17	6J00	00 - 20	Program Effect6, speed slow to fast
18	7J00	00 - 20	Program Effect7, speed slow to fast
19	8J00	00 - 20	Program Effect8, speed slow to fast
20	9J00	00 - 20	Effect 1-8circulate run, speed slow to fast
21	1d00	00 - 20	Red Gradual change, speed slow to fast
22	2d00	00 - 20	Green Gradual change, speed slow to fast
23	3d00	00 - 20	Blue Gradual change, speed slow to fast
24	4d00	00 - 20	Purple Gradual change, speed slow to fast
25	5d00	00 - 20	Orange Gradual change, speed slow to fast
26	6d00	00 - 20	Red,Green,Blue,Purple,Orange Color Circulate Gradual change, speed from slow to fast
27	SU00	00 - 20	Sound Program Effect, speed from slow to fast